


[t] 800.413.8783

805.494.0622
E-mail: service@sdcsecurity.com
801 Avenida Acaso, Camarillo, CA 93012
PO Box 3670, Camarillo, CA 93011


INSTALLATION INSTRUCTIONS LR100SGK-EM ELECTRIC LATCH RETRACTION DEVICE KIT SARGENT MODELS: 8300, 8400, 8500, 8600, 8700, 8800 & 8900

<u>Retrofit Installation Note:</u> 42" or 48" exit devices that have been modified to fit a 36" or smaller opening, may not have the required space to fit the standard E. L. R. assembly. Always verify the distance from the end of the touchpad to the end rail, and if necessary, consult with the factory for appropriate selection.

Remove access cover. Disconnect and discard all dogging components. Then remove the two pre-existing screws from the device.

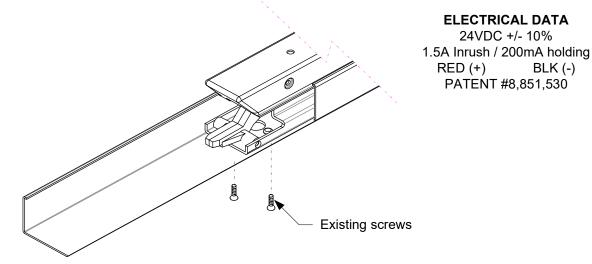

Slide the ELR assembly into the housing and under the hinge bracket. Position the roller at the front of the ELR under the pivot arm of the push bar.

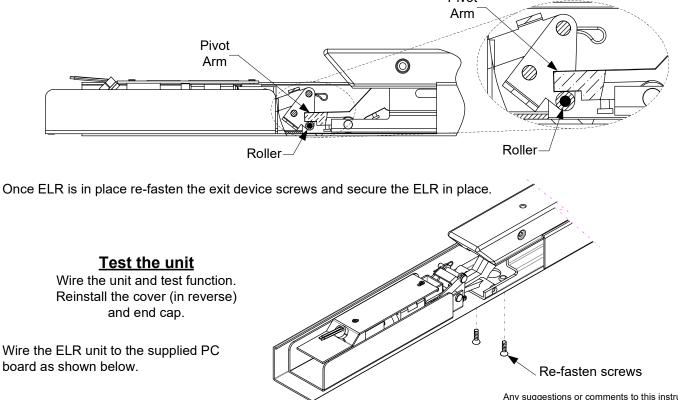


REV J 10-23 Page 1


Any suggestions or comments to this instruction or product are welcome. Please contact us through our website or email engineer@sdcsecurity.com



When retrofitting to existing vertical rod devices, adjustment of the rods is required for proper operation of the Electric Latch Retractor. Once the unit is properly installed, energize it so the latch is dogged down, then reconnect the vertical rods to the device and make the proper adjustments.

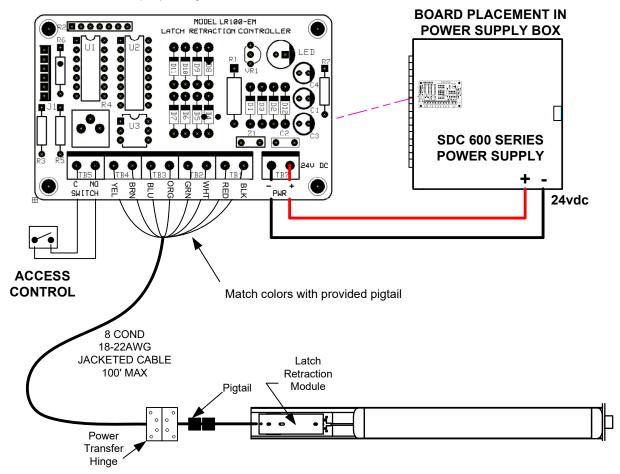

Wire colors from provided Pigtail must connect to the same colors marked on PCB. If the Jacketed Cable does not have the same colors as the Pigtail, use the following chart to mark the color connections from Pigtail to Jacketed Cable to PCB.

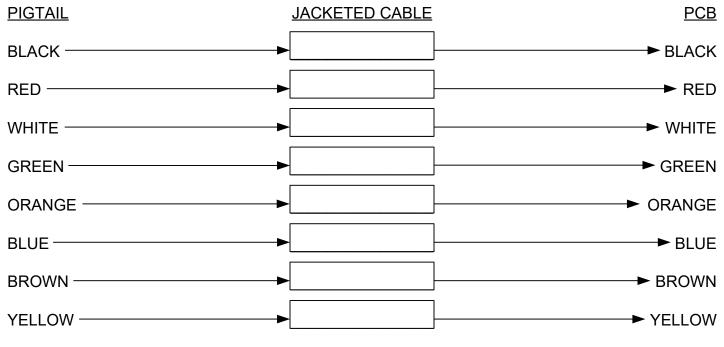

P:\INST INSTRUCTIONS\ELR KITS\INST-LR100SGK-EM REV J 10-23 Page 2